

OOK/ASK SUPER-REGENERATIVE RECEIVER - 433.92 MHz -3V- CASCODE - LOW CONSUMPTION - FRONT END FILTER

Product Code: **32001117V5LF** **PRELIMINARY**



DESCRIPTION:


Super regenerative OOK/ASK receiver. Cascode input stage improves separation between antenna and oscillator-detector to the advantage of stability and reliability; a SAW filter enhances selectivity and suppresses out-of-band interference.

HIGHLIGHTS:


This version is optimized for the reduction of power consumption and is suitable for battery-powered applications, photovoltaics, etc.. The module has been developed to comply with the **Radio Equipment Directive (RED) 2014/53/EU**. Compliant with **REACH** and **RoHS** directives.

APPLICATIONS:

Anti-theft systems, gate and door openers, security systems, battery systems, data transmission, remote sensors, industrial controls and more.

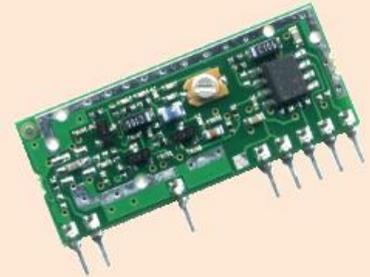

MECHANICAL CHARACTERISTICS

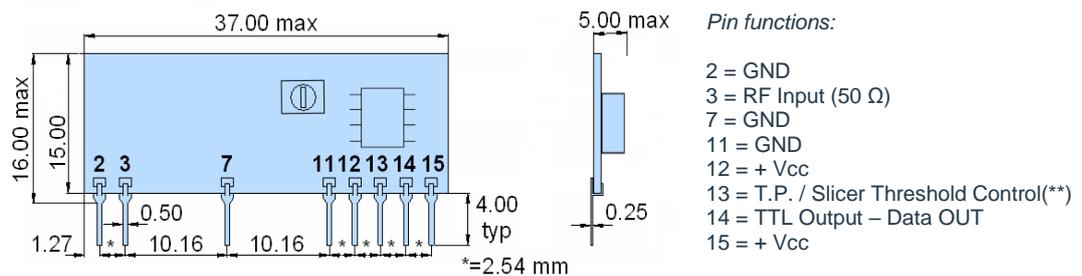

ABS. MAX. RATINGS

| | |
|--|-----------------|
| Supply voltage, +Vcc, PIN 12, 15: | + 8 Volt |
| Radio Frequency Input, pin 3: | + 10 dBm |
| Output pins voltage with respect to GND: | + Vcc |
| Storage Temperature: | - 40 ÷ + 100 °C |
| Operating Temperature: | - 20 ÷ + 70 °C |

BS. MAX. RATINGS

| Parameter | Min. | Typ. | Max. | Unit | Notes |
|-----------------------|-----------|--------|------|------|--------|
| Supply Voltage (+Vcc) | 4.5 | 5.0 | 5.5 | Volt | |
| Current consumption | - | 0.6 | - | mA | |
| Operating frequency | - | 433.92 | - | MHz | |
| Sensitivity | - | -96 | - | dBm | Note 1 |
| -3dB RF bandwidth | - | 300 | - | KHz | |
| Baud rate | - | - | 4800 | Baud | |
| Start - up time | 300 | - | 550 | ms | Note 2 |
| Settling time | - | 40 | - | ms | Note 3 |
| Output Logic low | 0 | 0.02 | 0.05 | Volt | |
| Output Logic high | +Vcc-0.1V | - | - | Volt | |
| Output load (pin 14) | 47 | - | - | kOhm | |

Note 1: Wanted signal AM pseudo random code NRZ (mod. depth 100%) 2400 bps. Result at BER=10e-2 or Mipot S.p.A. reserves the right to modify the specifications without notice

better.

Note 2: Time by power-on to valid data reception.

Note 3: Time by wanted signal at RF input to valid data reception. Quantity measured with RF input signal level of -95 dBm; minimum time is obtained by cycling the device state between ON and OFF every **1 second**.

Note 4: All RF parameters measured with input (pin 3) connected to 50 Ohm impedance signal source or load.

APPLICATION NOTE (**)

Output data-slicer threshold can be controlled connecting a resistor with values among 3.3 MOhm (-3dB), 1 MOhm (-5dB) and 680 kOhm (-10dB) between T.P. and GND pins to decrease sensitivity (obtaining a muting effect on TTL output), or between T.P. and +Vcc increasing even further the sensitivity (about 3.3 MOhm, +5 dB). If PIN 13 is used as audio output, the signal on T.P. has to be taken by means of a 100 nF decoupling capacitor in order to avoid to load the output.

MIPOT S.p.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel.+39 0481 630200ra.

Fax +39 0481 62387


mipot@mipot.com

Mipot S.p.A. reserves the right to modify the specifications without notice

GUIDELINES FOR CORRECT POWER SUPPLY AND GROUND PLANE LAYOUT DESIGN IN RECEIVING APPLICATIONS

In developing applications that use Mipot Receiver Modules, care must be taken in designing the layout of the ground plane and power supply paths with particular attention to some general rules as described in the following sections.

Below is a typical layout of the solder side of a PCB suited for a receiver, including pin-out

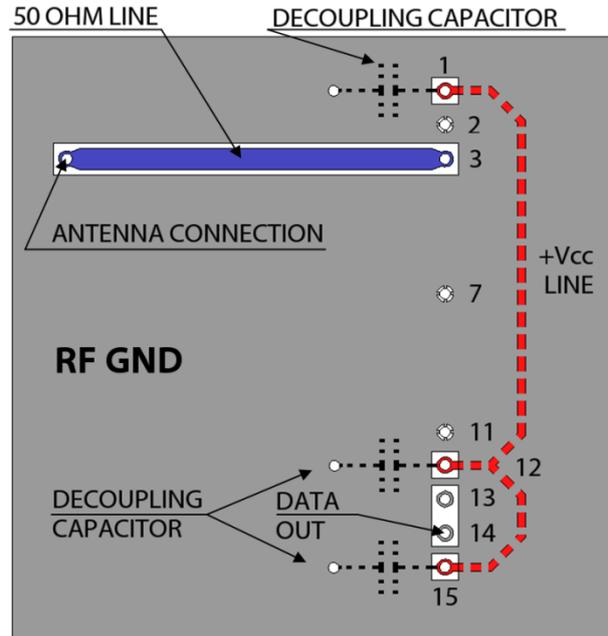


numbering:

Note: Dotted elements must be placed on component side (PCB side opposite to ground layer).

Note: This is a general layout, in some modules it could be slightly different (e.g. pin 1 and/or pin 15 not mounted)

Ground Layer:

- Must be present around the antenna output area;
- Must cover all the area around the receiver module;
- Circuit should be realized on two side PCB, connecting both sides with pass-through far at least 15 mm each other.

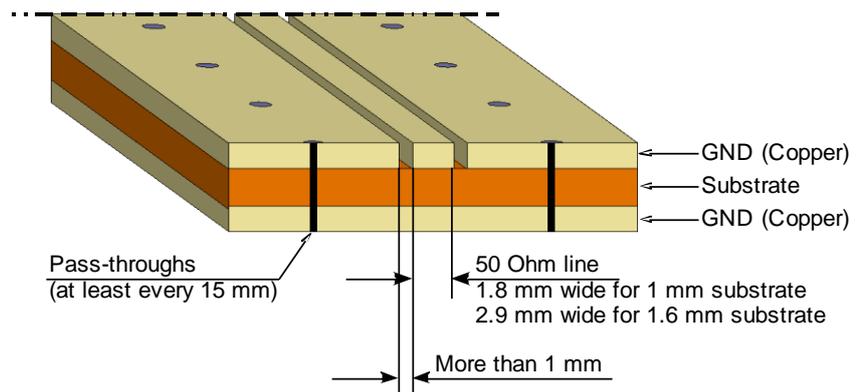

Note: the dimensions in the picture above are referred to a FR4 substrate PCB

Supply Path:

- Needs a good filtered DC component;
- Place decoupling ceramic capacitors directly on supply pin(s), taking care to use different capacitance values at different pins (10 to 1000nF).

Antenna line:

- Should be kept as short as possible in order to reduce losses.

MI POT S.P.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel.+39 0481 630200.ra.


Fax +39 0481 62387

mipot@mipot.com

Mipot S.p.A. reserves the right to modify the specifications without notice

Another fundamental issue when dealing with supply paths is to ensure a good decoupling between Digital, RF and Power circuitry.

Below is the recommended Power Supply Path structure to be followed:

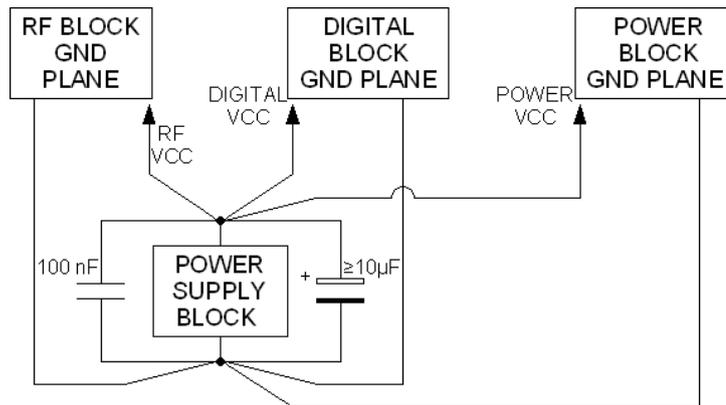

Keep separate paths for:

- RF block;
- Digital block;
- Power block.


HINTS FOR ANTENNA SELECTION

A good antenna design is required to achieve the maximum performances from Mipot modules and obtain the required range.

The recommended antenna is a **Quarter-Wave Monopole Antenna** positioned vertically on a ground plane having a radius $R \geq L$ (where L is the antenna length corresponding to $\frac{1}{4}$ wave length), in an area that has to be kept free from other components and metallic objects.



The antenna length can be quickly determined as $L[\text{cm}] = 7500 / \text{Frequency}[\text{MHz}]$. Typical length for a quarter wave antenna operating at 434MHz is 17cm (6.7 inch), for a frequency of 868MHz the length will be 8.6 cm (3.4 inch), bearing aware that some corrections will be necessary in depending upon the thickness, the material, the eventual coating etc., in order to obtain a correctly tuned device. It is also to be noticed that using a planar ground the antenna impedance is approximately equal to 35Ohm (i.e. $\frac{1}{2}$ impedance of a dipole), so a matching network will be useful to improve the efficiency.

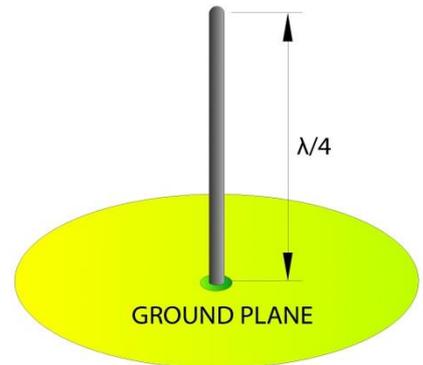

Example of $\lambda/4$ antenna for 868MHz

If this type of antenna is not usable (e.g. in portable devices) other solutions are obviously possible, keeping in mind that antenna design varies depending on the specific application, the materials used, the layout structure and the size of the ground plane, so a *specific design* is recommended to get the maximum performance.

In designing antennas it is useful to follow some general considerations:

- keep the area near the antenna as free as possible from other components and metallic objects
- avoid tracks and ground planes near the area of the antenna
- where possible use a large ground plane having a radius $R \geq L$, where L is the antenna length, placing the antenna in the center
- ensure good electrical connections of the ground layer
- use 50 Ohm coax cable with low insertion loss if long connections are used.

An alternative to an antenna specific design is the use of some commonly used antenna solutions which can give satisfactory results if correctly chosen and dimensioned:

MI POT S.P.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel.+39 0481 630200ra.

Fax +39 0481 62387

mipot@mipot.com


Mipot S.p.A. reserves the right to modify the specifications without notice

- **PCB trace antenna:**

If the size of the device allows, it should be also a quarter-wave antenna. Shorter antennas implicate a loss of efficiency and a poor range. Trace length could be 10% to 20% shorter than the theoretical value, depending on the dielectric and the thickness of the PCB. If the device is to be handheld, the antenna could be even shorter, to compensate the effect of human body.

- **Helical antenna:**

This is typically a coil which is wound with copper, phosphor bronze or steel wire, with an open end and the other connected to the RF device. The number of turns is depending upon coil diameter, spacing of the turns and diameter of the wire, so it can be determined by winding a coil with a great number of turns and reducing them by cutting until it is tuned at the operating frequency. Fine tuning can be achieved by spreading or compressing the coil. If the coil is wound tightly enough, it may be shorter than one-tenth of a wavelength.

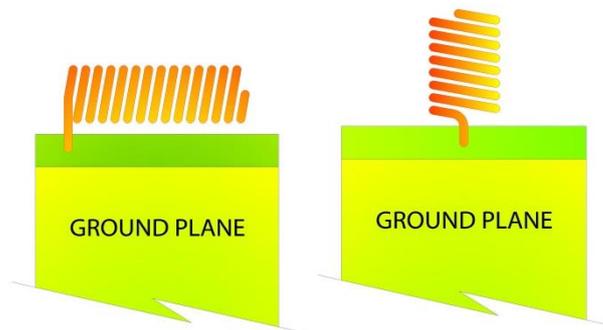

Thanks to its high Q factor, this antenna has typically a narrow bandwidth, and the spacing of the turns has great influence on the performance. For this reasons it can be easily de-tuned by nearby objects, including human body, so it might not be suitable for handheld devices.

This antenna must have a good ground plane, and its performance is very sensitive to antenna position with respect to the ground plane. It is also preferable not to have a long transmission line interposed between the antenna and receiver, but connect it as close as possible to the RF device.


achieved by spreading

- **PCB Loop antenna:**

This is typically a PCB track with one end tied to ground and the other end connected to the RF device via a tuning circuit (e. g. pi-network) whose scope is to tune and match the low real part impedance antenna to the 50 Ohm TX/RX device output.

It is the least efficient antenna, having an efficiency loss of at least 15-20dB with respect to the quarter wave antenna, but has the advantage that it is not easily detuned by hand effects, so it is often used in handheld transmitters.

Since it has very low gain and a narrow bandwidth, the loop should not have a too small radius to avoid poorer efficiency performance and care should be taken in tuning through the matching network.

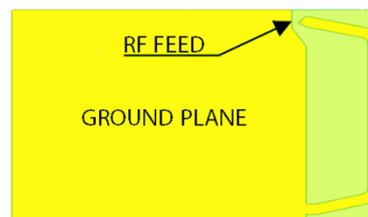

PCB loop antenna

| Revision | Date | Description |
|----------|------------|-------------|
| 0 | 16.07.2018 | Preliminary |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |