


32001409 LoRaWAN™ 915 MHz band TRX

COMMAND REFERENCE

Product Code: **32001409**

1. PINOUT

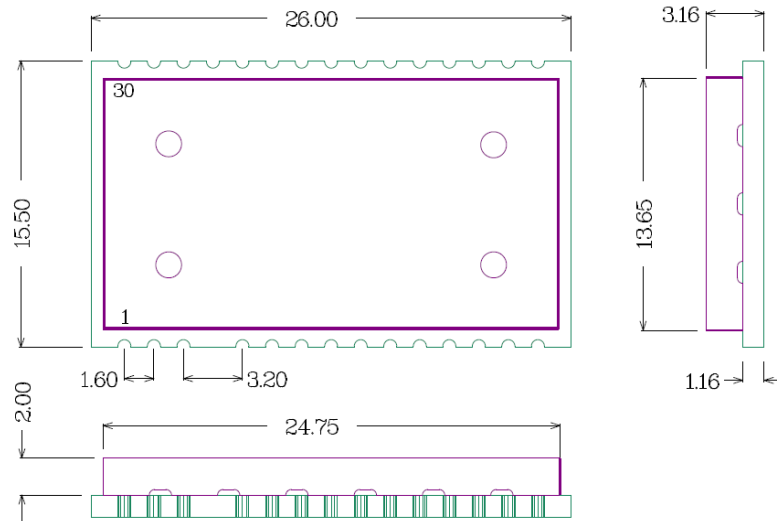

ALL DIMENSIONS ARE IN MILLIMETERS
GENERAL TOLERANCE +/-0.1MM

2. PIN DESCRIPTION

Pin	Name	Pin type	Description	Notes
1	GND	Supply	Ground (0 V)	
2	RF I/O	A IN/OUT	Tx: output RF Rx: input RF	
3	GND	Supply	Ground (0 V)	
5	NU	NC	Not Used Pin – do not connect	
6	NDATA_INDICATE	D OUT	Data Indicate Pin	
7	NWAKE	D IN	Wake-up Pin	
8	NU	NC	Not Used Pin – do not connect	
9	NU	NC	Not Used Pin – do not connect	
10	NU	NC	Not Used Pin – do not connect	
11	UART TX	D OUT	UART TX Pin	
12	UART RX	D IN	UART RX Pin	
13	NU	NC	Not Used Pin – do not connect	
14	NU	NC	Not Used Pin – do not connect	
15	GND	Supply	Ground (0 V)	
16	GND	Supply	Ground (0 V)	
17	Vcc	Supply	Power supply	
18	SWDAT	NC	Reserved for programming – do not connect	
19	SWCLK	NC	Reserved for programming – do not connect	
20	SWV	NC	Reserved for programming – do not connect	
21	NRST	D IN	Reset. Input Pull-Up	
22	NU	NC	Not Used Pin – do not connect	
23	NU	NC	Not Used Pin – do not connect	
24	NU	NC	Not Used Pin – do not connect	
25	NU	NC	Not Used Pin – do not connect	

Mipot S.p.A. reserves the right to modify the specifications without notice

Cormons, August 27th, 2019

26	NU	NC	Not Used Pin – do not connect
27	NU	NC	Not Used Pin – do not connect
28	NU	NC	Not Used Pin – do not connect
29	NU	NC	Not Used Pin – do not connect
30	GND	Supply	Ground (0 V)

3. UART INTERFACE DATA FRAME FORMAT

UART interface allows Host both to configure the module and to exchange LoRa radio frame data messages.

3.1. Physical Parameters

Default UART configuration is 115200 8n1. Baud rate can be changed configuring an EEPROM parameter.

Used Lines:

Line	Description	Notes
TX UART	Uart Tx pin. Output Push-pull	
RX UART	Uart Rx pin. Input Pull-up	Equivalent Internal Pull-up 40 kΩ (Typical Value)
NDATA_INDICATE	Module Digital Output, Indicate Radio Frame Received.	
NWAKE	Module Digital Input. This pin has the function to wake up the module	Equivalent Internal Pull-up 40 kΩ (Typical Value)

3.2. Byte Order

Multiple byte values are transmitted in little endian order with least significant byte first (LSB).

3.3. Message Structure

The structure of the messages is the following:

HEADER	CMD	LENGTH	Payload(n Bytes)	Checksum

Where:

HEADER = 0xAA

CMD = Command code to module, see following table.

LENGTH = Payload length

Checksum = 2's complement of the sum of all preceding bytes

Each command from the host invokes an answer from the module in the same format. The answer to the host has the CMD field equal to host request OR 0x80.


3.4. Detailed Signal Flow

When the module receives a valid command and the checksum is correct, the module sets NDATA_INDICATE LOW, transmits the answer through UART TX pin and then sets NDATA_INDICATE HIGH.



In order to transfer a received radio frame to the host microcontroller, the module has to set NDATA_INDICATE LOW, wait for DATA_INDICATE_TIMEOUT expiration, then send the message on UART TX pin. DATA_INDICATE_TIMEOUT represents the time (in ms) between the instant when NDATA_INDICATE pin goes LOW and the start of transmission on UART TX pin.

The module enters sleep mode as soon as possible therefore, before initiating a UART session, the host shall wake it up by setting the NWAKE pin LOW (pin 7) and then setting it back HIGH at the end of the session.

Example of UART command session:

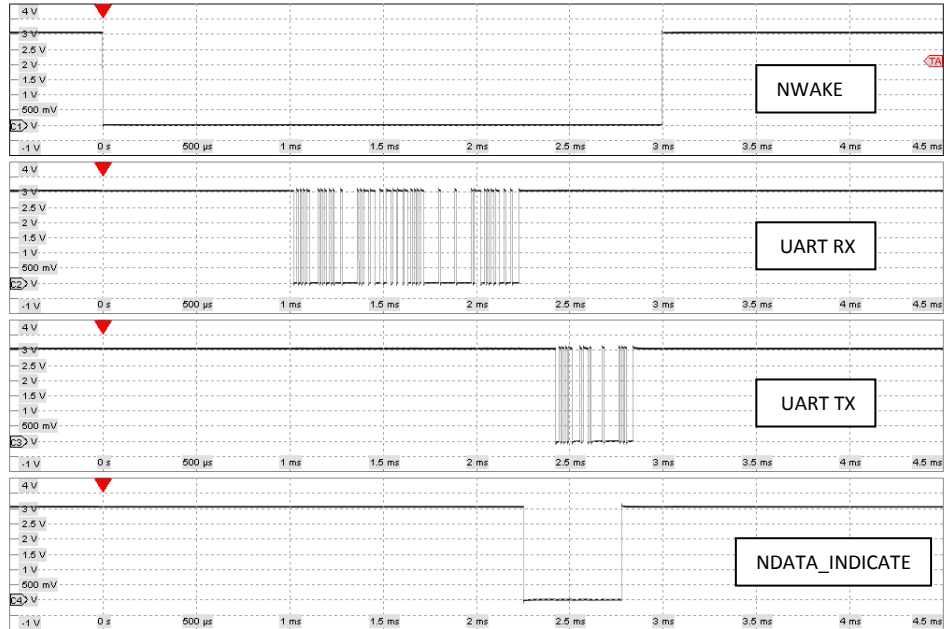

Example of UART RX Command session (DATA_INDICATE_TIMEOUT = 5ms):

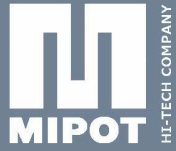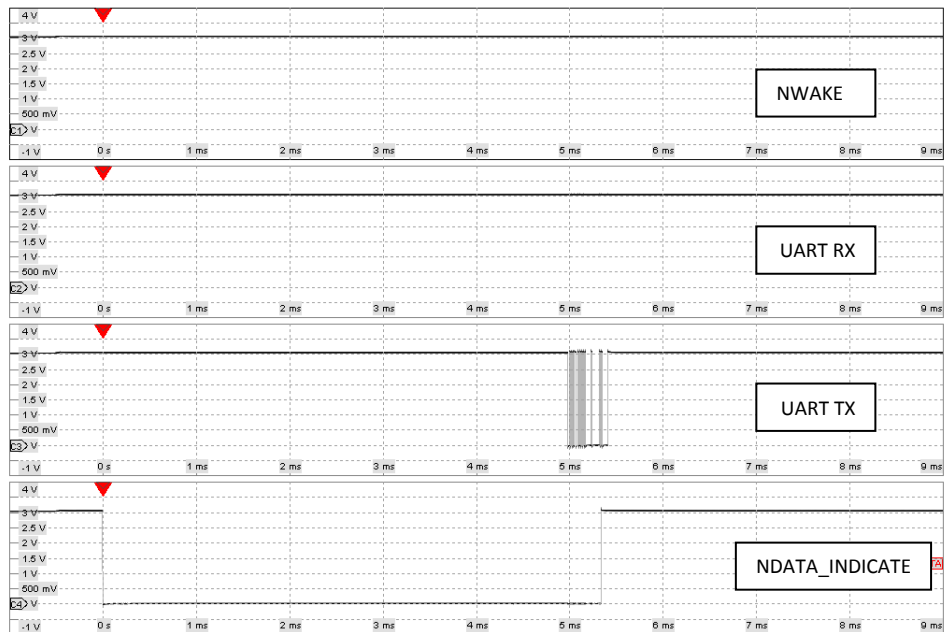

HI-TECH COMPANY


RF WIRELESS

MIPOT S.P.A.

Via Corona, n.5
 (Zona Ind.)
 34071 Cormons (GO)
 Italy
 Tel. +39 0481 630200 ra.
 Fax +39 0481 62387
 mipot@mipot.com

4. SLEEP MODE AND LORA TRANSMISSION CURRENT WAVEFORM

When the module transmits a LoRa message module enters sleep mode between transmission and reception states. The following picture shows the current waveform measured across 1 Ohm resistor and the typical current values for each state:

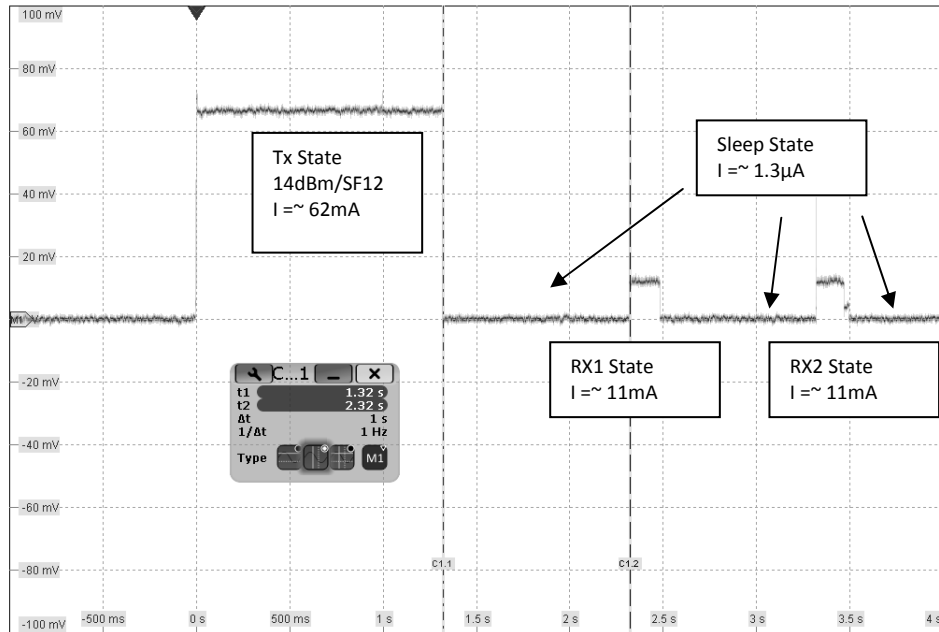

5. COMMANDS DESCRIPTION

Command (CMD)	Value	Description
RESET_CMD	0x30	Module Software Reset
FACTORY_RESET_CMD	0x31	Restore EEPROM to factory default values
EEPROM_WRITE_CMD	0x32	Write EEPROM parameter
EEPROM_READ_CMD	0x33	Read EEPROM parameter
GET_FW_VERSION_CMD	0x34	Get Firmware Version
GET_SERIALNO_CMD	0x35	Get Serial Number stored in Module
GET_DEV_EUI	0x36	Get Factory Stored DevEUI
JOIN_CMD	0x40	Network Join Command
JOIN_IND	0x41	Join result indication
GET_ACTIVATION_STATUS_CMD	0x42	Get activation status command
SET_APP_KEY_CMD	0x43	Set Application Key (value stored in EEPROM)
SET_APP_SESSION_KEY_CMD	0x44	Set Application Session Key (value stored in EEPROM)
SET_NWK_SESSION_KEY_CMD	0x45	Set Network Session Key (value stored in EEPROM)
TX_MSG_CMD	0x46	Transmission of LoRa Radio Message
TX_MSG_CONFIRMED_IND	0x47	Indication of LoRa Radio Confirmed Message Transmission
TX_MSG_UNCONFIRMED_IND	0x48	Indication of LoRa Radio Unconfirmed Message Transmission
RX_MSG_IND	0x49	Indicate reception of LoRa Radio Message
GET_SESSION_STATUS_CMD	0x4A	Get the session status
SET_NEXT_DR_CMD	0x4B	Set next datarate command
SET_BATTERY_LVL_CMD	0x50	Set Battery Level
GET_BATTERY_LVL_CMD	0x51	Get Battery Level
SET_UPLINK_CNT_CMD	0x52	Set Uplink Counter
GET_UPLINK_CNT_CMD	0x53	Get Uplink Counter
SET_DOWNLINK_CNT_CMD	0x54	Set Downlink Counter
GET_DOWNLINK_CNT_CMD	0x55	Get Downlink Counter
SET_CH_MASK_CMD	0x57	Set Channels Mask
GET_CH_PARAMETERS_CMD	0x58	Get Channel Parameters

MIPOT S.P.A.

Via Corona, n.5
(Zona Ind.)
34071 Cormons (GO)
Italy
Tel. +39 0481 630200 ra.
Fax +39 0481 62387
mipot@mipot.com

5.1. RESET_CMD (0x30)

This command performs a module reset after about 1 second. Upon received request the module will start a timer and reply immediately to the host microcontroller. When the timeout expires the module resets. UART interface will be unavailable during the reset procedure.

Host: 0xAA, 0x30, 0x00, 0x26
Reply: 0xAA, 0xB0, 0x00, 0xA6

5.2. FACTORY_RESET_CMD (0x31)

This command performs an EEPROM recovery to default values. This command is allowed only when the module is in idle state (network activation has not been performed yet).

Host: 0xAA, 0x31, 0x00, 0x25
Reply: 0xAA, 0xB1, 0x01, Status, cks
Status: 0x00: Success
0x02: LoRa Mac not in idle state

5.3. EEPROM_WRITE_CMD(0x32)

This command performs an EEPROM data write. This command is allowed only when module is in idle state (network activation has not been performed yet).

For Address and Data table see **Module Configuration** section.

Host: 0xAA, 0x32, Length, Start Address, <Data>, cks
Reply: 0xAA, 0xB2, 0x01, EEWriteStatus, cks

Note: Data outside range will not be stored in EEPROM and the current value will not be modified.

If the variable to be updated has the same value of the new one then the EEPROM will not be updated in order to minimize memory writing cycles.

EEWriteStatus: 0x00: Success
0x01: Data address outside range
0x02: LoRaMac not in idle state

5.4. EEPROM_READ_CMD(0x33)

This command performs an EEPROM data read.

For Address and Data table see **Module Configuration** section.

Host: 0xAA, 0x33, 0x02, Start Address, Number of bytes, cks
Reply: 0xAA, 0xB3, Length, Status, Data, cks
Status: 0x00: Success, Data contains EEPROM values
0xFF: Failure, Data is empty and Length is equal to 1

5.5. GET_FW_VERSION_CMD(0x34)

Get the 32bit firmware version.

Host: 0xAA, 0x34, 0x00, 0x22
Reply: 0xAA, 0xB4, 8, FWV0, FWV1, FWV2, FWV3, cks
FWV0, FWV1, FWV2, FWV3: Fw version

5.6. GET_SERIALNO_CMD(0x35)

Get Mipot 32bit Serial Number.

Host: 0xAA, 0x35, 0x00, 0x21
Reply: 0xAA, 0xB5, 0x04, SN0, SN1, SN2, SN3, cks

5.7. GET_DEVEUI_CMD(0x36)

Get DevEUI provided by Mipot.

Host: 0xAA, 0x36, 0x00, 0x20
Reply: 0xAA, 0xB5, 0x08, <DevEUI>, cks

Where DevEUI are the 8 bytes containing the Mipot EUI.

5.8. JOIN_CMD(0x40)

This command performs the join network command. There are two types of activation:

OTAA (Over The Air Activation): End devices must follow a join procedure before exchanging data within the network. This procedure requires the device to be personalized with Application identifier (AppEUI), Application Key (AppKey), and end-device identifier (DevEUI). After the Activation the following informations will be stored in End-Device: End-device Address (DevAddr), Network Session Key (NwkSKey), and Application Session Key (AppSKey).

ABP (Activation By Personalization): End-device Address (DevAddr), Network Session Key (NwkSKey), and Application Session Key (AppSKey) are known previously and each End-device is personalized with these fields.

For details see LoRaWAN™ Specifications.

Host: 0xAA, 0x40, 0x01, Mode, cks
 Reply: 0xAA, 0xC0, 0x01, Status, cks
 Mode: 0 = Activation by personalization (ABP)
 1 = Over the air activation (OTAA)
 Status: 0x00: Success
 0x01: Invalid parameter
 0x02: Busy

5.9. JOIN_IND(0x41)

This command indicates the result of OTAA join procedure.

Module: 0xAA, 0x41, 0x01, Status, cks
 Status: 0x00 = Success
 A value different from zero means that an error has occurred

5.10. GET_ACTIVATION_STATUS_CMD(0x42)

This command gets the module activation status.

Host: 0xAA, 0x42, 0x00, 0x14
 Reply: 0xAA, 0xC2, 0x01, Status, cks
 Status: 0x00 = Not activated
 0x01 = Joining
 0x02 = JOINED
 0x03 = MAC ERROR

5.11. SET_APP_KEY_CMD(0x43)

This command performs the EEPROM data write.

Host: 0xAA, 0x43, 0x10, <AppKey>, cks
 Reply: 0xAA, 0xC3, 0x00, cks
 AppKey: 16 bytes in Little Endian Order. Needed for OTAA procedure.

5.12. SET_APP_SESSION_KEY_CMD(0x44)

This command performs the EEPROM data write.

Host: 0xAA, 0x44, 0x10, <AppSKey>, cks
 Reply: 0xAA, 0xC4, 0x00, cks
 AppSKey: 16 bytes in Little Endian Order. Needed for APB procedure.

5.13. SET_NWK_SESSION_KEY_CMD(0x45)

This command performs the EEPROM data write.

Host: 0xAA, 0x45, 0x10, <NwkSKey>, cks
 Reply: 0xAA, 0xC5, 0x00, cks
 NwkSKey: 16 bytes in Little Endian Order. Needed for APB procedure.

5.14. TX_MSG_CMD(0x46)

This command performs the transmission of radio frame.

In case of Reliable data Transmission (Confirmed Frames) if the module doesn't receive an acknowledgement it will perform a datarate adaptation according to the LoRaWAN™ Specification V1.0.2, chapter 18.4, according to the following table:

Transmission Number	Data Rate
1 (first)	DR
2	DR
3	max(DR-1,0)
4	max(DR-1,0)
5	max(DR-2,0)
6	max(DR-2,0)
7	max(DR-3,0)
8	max(DR-3,0)

In case of Unreliable data Transmission (Unconfirmed Frames) the module will transmit the frames N times in according to "Unconfirmed TX Repetition Number" EEPROM parameter.

Host: 0xAA, 0x46, Length, Options, Port, <MsgPayload>, cks

Reply: 0xAA, 0xC6, 0x01, Status, cks

Options: 0bxxxxxxx0 = Unreliable Data Transmission

0bxxxxxxx1 = Reliable Data Transmission

Port: Port Number, from 1 to 223

MsgPayload: Data to transmit. The maximum allowed data length depends upon set data rate.

Status: 0x00: success

0x01: Device busy

0x02: Device not Activated

0x03: Channel Blocked by duty-cycle

0x04: Port number not supported

0x05: Length not supported

0x06: End Node in silent state

0x07: Error

5.15. TX_MSG_CONFIRMED_IND (0x47)

This command indicates the transmission of radio frame.

Module: 0xAA, 0x47, 0x05, Status, DataRate, TxPower, AckReceived, NbRetries, cks

Status: 0x00 = success

A value different from zero means that an error has occurred.

DataRate: 0 = SF10/125kHz

1 = SF9/125kHz

2 = SF8/125kHz

3 = SF7/125kHz

4 = SF8/500kHz

TxPower: 5 = 20dBm

6 = 18dBm

7 = 16dBm

8 = 14dBm

9 = 12dBm

10 = 10dBm

AckReceived: 0 = No Ack received

1 = Ack received

NbRetries: Number of transmissions.

MIPOT S.p.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel. +39 0481 630200 ra.

Fax +39 0481 62387

mipot@mipot.com

5.16. TX_MSG_UNCONFIRMED_IND (0x48)

This command indicates the transmission of radio frame.

Module: 0xAA, 0x48, 0x03, Status, DataRate, TxPower, cks

Status: 0x00 = success
 A value different from zero means that an error has occurred.

DataRate: 0 = SF10/125kHz
 1 = SF9/125kHz
 2 = SF8/125kHz
 3 = SF7/125kHz
 4 = SF8/500kHz

TxPower: 5 = 20dBm
 6 = 18dBm
 7 = 16dBm
 8 = 14dBm
 9 = 12dBm
 10 = 10dBm

5.17. RX_MSG_IND(0x49)

This command indicates the reception of radio frame.

Module: 0xAA, 0x49, Length, Status, MsgType, MulticastFlag, RxDataRate, RxSlot, FramePending, AckReceived, RxData, RssiLSB, RssiMSB, SNR, Port, Payload, cks

Status: 0x00 = success
 A value different from zero means that an error has occurred.

MsgType: Message type:
 0 = UNCONFIRMED
 1 = CONFIRMED
 2 = MULTICAST (Reserved for future usage)
 3 = PROPRIETARY

MulticastFlag: (Reserved for future usage)
 0 = No Multicast
 1 = Multicast message

RxDataRate: 8 = SF12/500kHz
 9 = SF11/500kHz
 10 = SF10/500kHz
 11 = SF9/500kHz
 12 = SF8/500kHz
 13 = SF7/500kHz

RxSlot: RxSlotValue
 0 = Rx window 1
 1 = Rx window 2

FramePending: Frame Pending status:
 0 = no downlink Frame Pending
 1 = downlink Frame Pending

AckReceived: Indicates if an Ack is received:
 0 = No Ack received
 1 = Ack Received

RxData: Indicates if data is available:
 0 = No data available
 1 = Data available

MIPOT S.P.A.

Via Corona, n.5
 (Zona Ind.)

34071 Cormons (GO)

Italy

Tel. +39 0481 630200 ra.

Fax +39 0481 62387

mipot@mipot.com

Mipot S.p.A. reserves the right to modify the specifications without notice

Cormons, August 27th, 2019

Rssi: 16-bit Rssi Value expressed in dBm
 SNR: 8-bit Signal-to-Noise Ratio
 Port: Port Number, from 1 to 223
 Payload: Data Message

Port and Payload are optional: if module receives an Ack from server after a reliable data transmission, module will transmit a RX_MSG_IND command without Port and Payload fields.

5.18. GET_SESSION_STATUS_CMD(0x4A)

This command gets the module current status.

Host: 0xAA, 0x4A, 0x00, cks
 Reply: 0xAA, 0xCA, 0x01, Status, cks
 Status: 0x00 = Idle
 0x01 = Busy (LoRa session running)
 0x02 = Device not activated
 0x03 = Delayed

5.19. SET_NEXT_DR_CMD(0x4B)

This command will set next transmission DR. The value is stored in RAM memory.

Host: 0xAA, 0x4B, 0x01, DataRate, cks
 Reply: 0xAA, 0xCB, Status, cks

DataRate: 0 = SF10/125kHz
 1 = SF9/125kHz
 2 = SF8/125kHz
 3 = SF7/125kHz
 4 = SF8/500kHz

Status: 0x00 = success
 A value different from zero means that an error has occurred.

5.20. SET_BATTERY_LEVEL_CMD(0x50)

This command will set the battery level required for *DevStatusReq* frame used in LoRaWAN class A protocol. The value is stored in RAM memory.

Host: 0xAA, 0x50, 0x01, BatteryLevel, cks
 Reply: 0xAA, 0xD0, 0x00, 0x86

where BatteryLevel has the following values:

0 = The end-device is connected to an external power source
 1...254 = The battery level, 1 being at minimum and 254 being at maximum
 255 = The end-device was not able to measure battery level.

5.21. GET_BATTERY_LVL_CMD (0x51)

This command will get the battery level value.

Host: 0xAA, 0x51, 0x00, 0x05
 Reply: 0xAA, 0xD1, 0x01, BatteryLevel, cks

Where BatteryLevel has the following values:

0 = The end-device is connected to an external power source
 1...254 = The battery level, 1 being at minimum and 254 being at maximum

5.22. SET_UPLINK_CNT_CMD(0x52)

This command will set the uplink counter in RAM memory.

Host: 0xAA, 0x52, 0x04, UplinkCnt0, UplinkCnt1, UplinkCnt2, UplinkCnt3, cks
 Reply: 0xAA, 0xD2, 0x00, 0x84

Where UplinkCnt is the 32-bit Uplink Counter.

5.23. GET_UPLINK_CNT_CMD(0x53)

This command will get the uplink counter from RAM memory.

Host: 0xAA, 0x53, 0x00, 0x03
 Reply: 0xAA, 0xD3, 0x04, UplinkCnt0, UplinkCnt1, UplinkCnt2, UplinkCnt3, cks

Where UplinkCnt is the 32-bit Uplink Counter.

5.24. SET_DOWNLINK_CNT_CMD(0x54)

This command will set the downlink counter in RAM memory.

Host: 0xAA, 0x54, 0x04, DownlinkCnt0, DownlinkCnt1, DownlinkCnt2, DownlinkCnt3, cks
 Reply: 0xAA, 0xD4, 0x00, 0x82

Where DownlinkCnt is the 32-bit Downlink Counter.

5.25. GET_DOWNLINK_CNT_CMD(0x55)

This command will get the downlink counter from RAM memory.

Host: 0xAA, 0x55, 0x00, 0x01
 Reply: 0xAA, 0xD5, 0x04, DownlinkCnt0, DownlinkCnt1, DownlinkCnt2, DownlinkCnt3, cks

Where DownlinkCnt is the 32-bit Downlink Counter.

5.26. SET_CH_MASK_CMD(0x57)

This command will set the channels mask to enable or disable a group of channels. These settings will be stored in **RAM memory**.

Host: 0xAA, 0x57, 0x09, Msk0_7, Msk8_15, Msk15_23, Msk24_31, Msk32_39, Msk40_47,
 Msk48_55, Msk56_63, Msk64_71, cks
 Reply: 0xAA, 0xD7, 0x01, Status, cks

MskX_Y: byte mask for the 8 channels between X and Y, X being the lowest channel index in the range.

For example:

0xAA, 0x57, 0x09, 0x7F, 0xFE, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0x80

Enables all channels but Channel0 and Channel15.

Status: 0x00: success,
 0xF0: failure, invalid parameters

MIPOT S.P.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel.+39 0481 630200 ra.

Fax +39 0481 62387

mipot@mipot.com

5.27. GET_CH_PARAMETERS_CMD(0x58)

This command will get the channel parameters.

Host: 0xAA, 0x58, 0x01, ChIdx, cks

Reply: 0xAA, 0xD8, 0x06, Freq0, Freq1, Freq2, Freq3, DrRange, ChStatus, cks

ChIdx: Channel index from 0 to 15.

Freqx: Frequency expressed in Hz, where Freq0 is LSB and Freq3 is MSB. For example 903900000 Hz = 0x35E06B60, Freq0 = 0x60, Freq1 = 0x6B, Freq2 = 0XE0, Freq3 = 0x35.

DrRange: Data Rate range. Data Rate Max is most significant nibble, and Data Rate min in least significant nibble.

DR_MAX: from 0 to 7

DR_MIN: from 0 to 7

ChStatus: 0x00 = Disabled

0x01 = Enabled



RF
WIRELESS

MIPOT S.P.A.

Via Corona, n.5

(Zona Ind.)

34071 Cormons (GO)

Italy

Tel. +39 0481 630200 ra.

Fax +39 0481 62387

mipot@mipot.com

6. MODULE CONFIGURATION

Multiple byte values are expressed in little endian order with least significant byte first (LSB).

Parameter	Description	Values Range	Default	Notes
AppKey	Application Key	0-255 for all 16 bytes	0 for all 16 bytes	Used in OTAA (Write Only Variable)
NwkSKey	Network Session Key	0-255 for all 16 bytes	0 for all 16 bytes	Used in ABP (Write Only Variable)
AppSKey	Application Session Key	0-255 for all 16 bytes	0 for all 16 bytes	Used in ABP (Write Only Variable)

6.1. LoRa Stack Parameters

Parameter	Description	Address	Values Range	Default	Notes
CustomerDevEUI	Customer 64 bit -Extended Unique ID	0x00 – 0x07	0-255 for all 8 bytes	0 for all 8 bytes	
AppEUI	64 bit Application Extended Unique ID	0x08-0x0F	0-255 for all 8 bytes	0 for all 8 bytes	Used in OTAA
DevAddr	Device Address	0x10-0x13	0-255 for all 4 bytes	0 for all 4 bytes	Used in ABP
Class	LoRaWAN Class	0x20	0 = Class A 1 = Class C	0	
DR/SF	LoRa datarate / Spreading Factor setting	0x21	0 = SF10/125kHz 1 = SF9/125kHz 2 = SF8/125kHz 3 = SF7/125kHz 4 = SF8/500kHz	0	Value used for next uplink TX. This value may change automatically. Indicative bit rate (bit/s): 0 = 980 1 = 1760 2 = 3125 3 = 5470 4 = 12500
Tx Power	Tx Power Level	0x22	5 = 20dBm 6 = 18dBm 7 = 16dBm 8 = 14dBm 9 = 12dBm 10 = 10 dBm	1	Value used for next uplink TX. This value may change automatically
ADR	Enable/Disable adaptive data rate	0x23	0-1	1	Automatic data rate adaption allowed.
Unconfirmed TX	Define the	0x24	1-15	1	

MIPOT S.P.A.

Via Corona, n.5
(Zona Ind.)
34071 Cormons (GO)
Italy
Tel.+39 0481 630200 ra.
Fax +39 0481 62387
mipot@mipot.com

Repetition Number	Number of uplink messages repetitions (unconfirmed messages only)				
Enable Customer EUI	Enable/Disable Customer EUI.	0x25	0 = Internal DevEUI 1 = Customer DevEUI	0	
RX2 Data Rate	Rx2 Window Data Rate	0x26	8 = SF12/500kHz 9 = SF11/500kHz 10 = SF10/500kHz 11 = SF9/500kHz 12 = SF8/500kHz 13 = SF7/500kHz	0	
RX2 Frequency	Rx2 Window Frequency	0x27-0x2A	923300000 MHz	923300000 to 927500000	
LinkCheckTimeout	RESERVED	0x2B-0x2C	0	0	Reserved. Must be set to 0.
PublicNtwEn	Enable public network sync word	0x2D	0 = Private Network 1 = Public Network	1	0 => Sync = 0x12 1 => Sync = 0x34

6.2. Module Parameters

Parameter	Description	Address	Range	Default	Notes
DataIndicateTimeout	Timeout in ms	0x80	1-255	5	Expressed in ms
UartBaudrate	Uart baudrate selection	0x81	0 – 5	4	0 = 9600 1 = 19200 2 = 38400 3 = 57600 4 = 115200

MIPOT S.P.A.

Via Corona, n.5
(Zona Ind.)
34071 Cormons (GO)
Italy
Tel. +39 0481 630200 ra.
Fax +39 0481 62387
mipot@mipot.com

6.3. Internal DATA (Read Only)

Parameter	Description	Notes
SerialNumber0	Byte 0 SN	Serialization at 32 bit
SerialNumber1	Byte 1 SN	
SerialNumber2	Byte 2 SN	
SerialNumber3	Byte 3 SN	
FwVersion0	Byte 0 FW Version	Firmware Version
FwVersion1	Byte 1 FW Version	
FwVersion2	Byte 2 FW Version	
FwVersion3	Byte 3 FW Version	
DevEUI0	Byte 0 Dev EUI	64 bit -Extended Unique Identifier
DevEUI1	Byte 1 Dev EUI	
DevEUI2	Byte 2 Dev EUI	
DevEUI3	Byte 3 Dev EUI	
DevEUI4	Byte 4 Dev EUI	
DevEUI5	Byte 5 Dev EUI	
DevEUI6	Byte 6 Dev EUI	
DevEUI7	Byte 7 Dev EUI	

7. EXAMPLES

This section describes some examples for network configuration and message exchange.


END NODE OTAA (Over The Air Activation)

This procedure performs the Over The Air End-Node activation. This procedure requires the device to be personalized with the Application Identifier (AppEUI), Application Key (AppKey), and End-Device Identifier (DevEUI).

Host command: 0xAA, 0x40, 0x01, 0x01, 0x14 (#1)
 Module Answer: 0xAA, 0xC0, 0x01, 0x00, 0x95 (#2)

When the activation procedure succeeds, an indicate message will be transmitted by module:

Module Indicate: 0xAA, 0x41, 0x01, 0x00, 0x14 (#3)

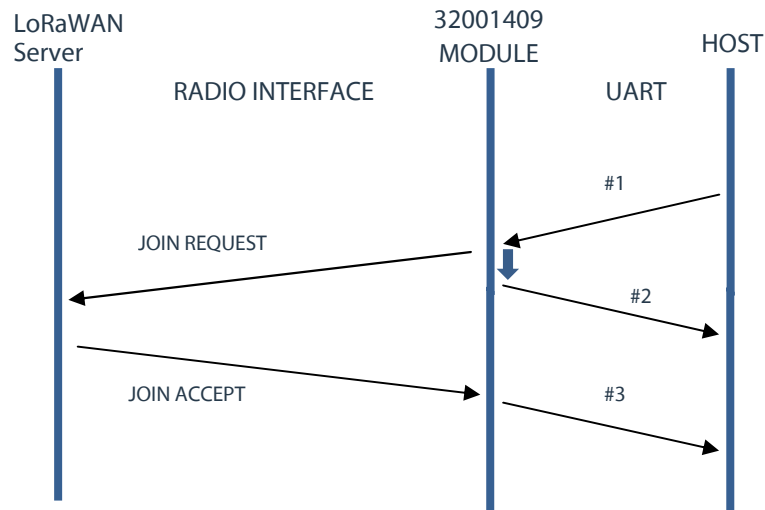

7.1. END NODE ABP (Activation by personalization)

End-device Address (DevAddr), Network Session Key (NwksKey), and Application Session Key (AppSKey) are known in advance and End-devices are personalized with this fields.

Host command: 0xAA, 0x40, 0x01, 0x00, 0x15 (#4)
 Module Answer: 0xAA, 0xC0, 0x01, 0x00, 0x95 (#5)

Mipot S.p.A. reserves the right to modify the specifications without notice

Cormons, August 27th, 2019




RF WIRELESS

MIPOT S.P.A.

Via Corona, n.5
 (Zona Ind.)
 34071 Cormons (GO)
 Italy
 Tel.+39 0481 630200 ra.
 Fax +39 0481 62387
 mipot@mipot.com

No radio message is exchanged through this procedure.

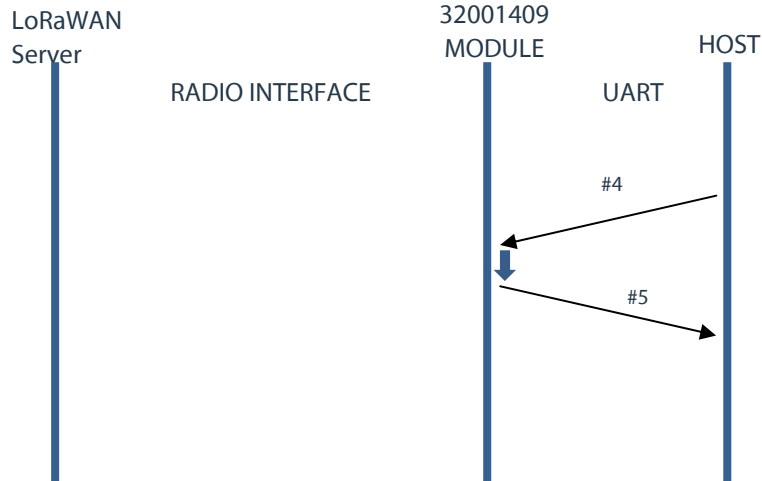

7.2. MESSAGE UNCONFIRMED TRANSMISSION SESSION

This example shows how to send an unconfirmed message. Here assume Unconfirmed TX Repetition Number equal to 3. To send a PAYLOAD equal to {0xAA, 0xBB, 0xCC, 0xDD, 0xEE, 0xFF} to port 10:


Host command: 0xAA, 0x46, 0x08, 0x00, 0x0A, 0xAA, 0xBB, 0xCC, 0xDD, 0xEE, 0xFF, 0x03 (#6)

Module Answer: 0xAA, 0xC6, 0x01, 0x00, 0x8F (#7)

When the session ends, module sends back to the host an indication message containing the transmission power and transmission datarate:

Module Indicate: 0xAA, 0x48, 0x03, 0x00, 0x03, 0x06, 0x02 (#8)

In this example the node has transmitted one frame at 18dBm SF7/125kHz.

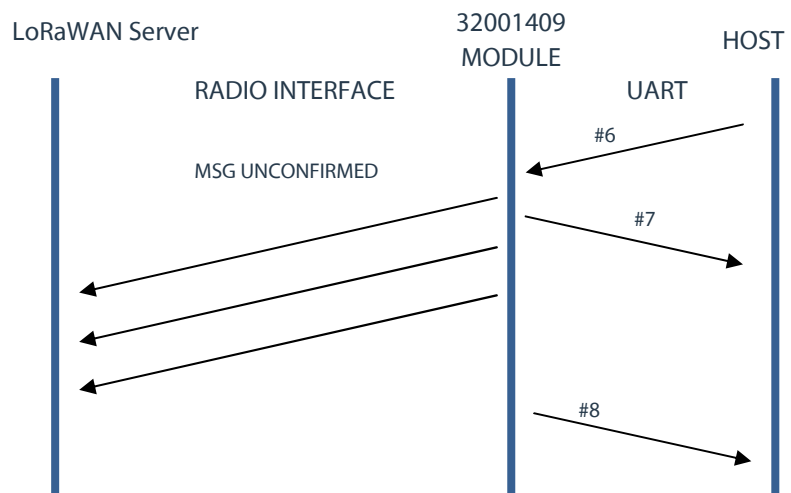

7.3 MESSAGE CONFIRMED TRANSMISSION SESSION

This example shows how to send a confirmed message.

To send a PAYLOAD equal to {0xAA, 0xBB, 0xCC, 0xDD, 0xEE, 0xFF} to port 10:


Host Cmd: 0xAA, 0x46, 0x08, 0x01, 0x0A, **0xAA, 0xBB, 0xCC, 0xDD, 0xEE, 0xFF**, 0x02
(#9)

Module Answer: 0xAA, 0xC6, 0x01, 0x00, 0x8F (#10)

When the session ends, module sends back to the host an indication message containing the transmission power, transmission datarate, a confirm of Ack reception, and the number of transmitted messages:

Module Indicate: 0xAA, 0x47, 0x05, 0x00, 0x03, 0x06, 0x01, 0x01, 0xFF
(#11)

In this example the node has transmitted one frame at 18dBm SF7/125kHz and it has received an ack by server.

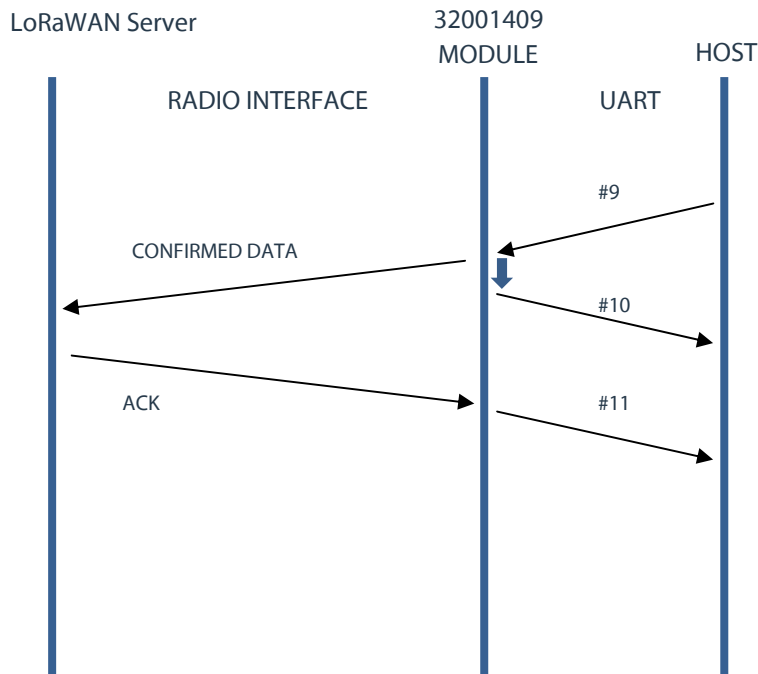

MIPOT S.P.A.

Via Corona, n.5
(Zona Ind.)
34071 Cormons (GO)
Italy
Tel. +39 0481 630200 ra.
Fax +39 0481 62387
mipot@mipot.com

8. GLOSSARY

ABP = Activation By Personalization
 OTAA = Over The Air Activation
 SN = Serial Number
 FW = Firmware
 EUI = Extended Unique Identifier
 LSB = Least significant byte
 MSB = Most significant byte
 Cks = Checksum

9. REFERENCES

- [1] LoRaWAN™ Specification V1.0.2
- [2] Sx1272 Datasheet

10. REVISION HISTORY

Revision	Date	Description
0.1	04-05-2018	Preliminary
1.0	28-08-2019	Final release

MIPOT S.P.A.

Via Corona, n.5
 (Zona Ind.)
 34071 Cormons (GO)
 Italy
 Tel. +39 0481 630200 ra.
 Fax +39 0481 62387
 mipot@mipot.com